
NAR-7164

Series Screen Instruction Manual






1.1 Screen Key Description

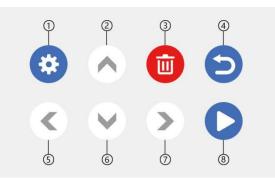

1	setup	Enter the setting options page	
2	UP	UP	
3	Delete	Delete current file during playback	
4	Return	Return to previous menu	
5	Left	Move Left	
6	Down	Move Down	
7	Right	Move Right	
8	Confirm	Confirm / playback	

1.2 LCD Screen Display Description

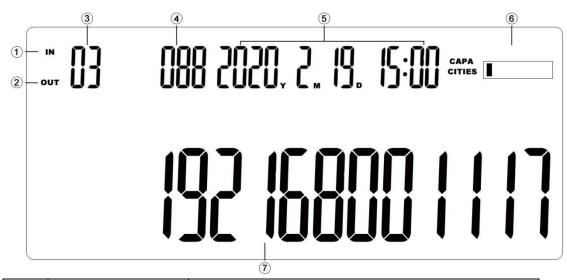

1	Decording type	IN: Incoming Calls	
1	Recording type (playback)	OUT: Outing Calls	
2	(playback)	No Display: Sound control recording	
3	Current serial number	When playing back: the serial number of the current file	
4	Total recording	Recording status: display recording duration	
	Total recording	Playback status: displays the total number of recordings on	
	quantity of the day	the day of playback	
	Time / date display	In standby mode: display time / date	
5		Playback: displays the time / date of the current	
		recording file	
6	Disk storage space	Display the remaining space capacity in the hard disk	
7	Variable display area	The current IP address is displayed by default	

1.3 Set function list

1.4

Screen display	Function description	Operation method	Default value
dRtE	Date time setting	Press the set key + confirm key	
	Volume Setting	Press set key + scroll down once + confirm key	3
TC9 T' CHF	Luminance setting	Press set key + scroll down 2 times + confirm key	5
היה גיהנ	Minimum recording	Press set key + scroll down 3 times + confirm key	1 second
האון די ייב	Maximum recording	Press set key + scroll down 4 times + confirm key	60 minute
⁰ 0 [[\[n\	Voice sensitivity	Press set key + scroll down 5 times + confirm key	10
00LLU ///11_0C0	Lock screen password	Press set key + scroll down 6 times + confirm key	blank
רטנג די שב	Waiting time for entering lock screen	Press set key + scroll down 7 times + confirm key	0: Not Enabled

Press the Return key to exit the setting

1.5 Date and time setting

1. In standby mode, press the setting key to display **DEC**, Press the confirm key again to enter the time setting, and the screen shows:



- 2. Press up / down / left / right buttons to adjust year, month, day, hour and minute in order
- 3. After adjustment, press the confirm key to complete the setting

1.6 Volume Setting

1. In standby mode, press the setting key + scroll down once **ULLIC**, Press the confirm key again to enter the volume setting, and the screen shows:



- 2. Press the up / down button to adjust the volume in order, which is divided into 3 levels
- 3. After adjustment, press the confirm key to complete the setting

1.7 LCD brightness setting

1. In standby mode, press the setting key + scroll down 2 times **LCD LT UNC**, Press the confirm key again to enter the brightness setting, and the screen shows:



2. Press the up / down keys to adjust the brightness of the screen in order, which is divided into 5 levels (the higher the value, the higher the brightness)

3. After adjustment, press the confirm key to complete the setting

1.8 Minimum Recording Time

1. In standby mode, press the set key + scroll down 3 times n n t n t, Press the confirm key again to enter the shortest recording setting, and the screen shows:



2. Press the up / down / left / right buttons to set the shortest recording time in sequence, (1-20 seconds)

3. After adjustment, press the confirm key to complete the setting

1.9 Maximum Recording Time

1. In standby mode, press the set key + scroll down 4 times **DILLIC**, Press the confirm key again to enter the longest recording setting, and the screen shows:



- 2. Press up / down / left / right buttons to set the longest recording time (1-120 minutes)
- 3. After adjustment, press the confirm key to complete the setting

1.10 Sound Control Sensitivity Setting

1. In standby mode, press the set key + scroll down 5 times $U_0 \subseteq U_1 \subseteq U_1$, Press the confirm key again to enter the voice control sensitivity setting, and the screen shows:



2. Press the up / down button to set the voice control sensitivity, with a total of 1-10 levels (the greater the value, the higher the sensitivity)

3. After adjustment, press the confirm key to complete the setting

1.11 Lock Screen Password Settings

1. In standby mode, press the set key + scroll down 6 times **DOLLU**, Press the confirm key again to enter the setting, and the screen shows:



2. You can set the lock screen password from the up / down / left / right buttons according to your own needs. After setting, press the confirm key, and then repeatedly input the set password. The screen shows:



3. After adjustment, press the confirm key to complete the setting

4. If you want to cancel the lock screen password, please enter the original password before entering the function. The screen shows:



5. After the input is completed, the page of inputting new password will be displayed. At this time, it is not necessary to set, but press the confirm key twice to complete the setting Return to the function page, and the lock screen password function will be cancelled

** The default password is empty **

1.12 Lock Screen Waiting Time

1. Press the set key + turn down 7 times in standby mode LOLL LINE, Press the confirm key again to enter the setting, and the screen shows:



2. Press the up / down key to set the lock screen waiting time. The maximum setting time is 99 seconds

3. After adjustment, press the confirm key to complete the setting

00: Disabled **

1.13 Playback


1. In the main screen, press the playback / confirm key to enter the playback mode, and the screen displays:



2. Press the up / down / left / right buttons to select the date to query the recording file, then press the Enter key to enter and select the channel:



3. Press the confirm key again to enter playback:

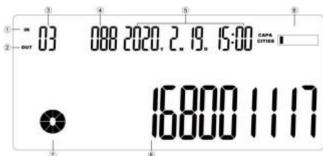

S/N	explain	Remarks	
1	N: Incoming Calls		
2	OUT: Outing Calls	No Display: Sound control recording	
3	Recording file serial number		
4	Total number of current date recordings	Up to 199 records a day	
5	The date of the current recording file		
6	Hard disk storage space	Display the remaining space capacity in the hard disk	
7	Playback progress bar		
8	Number display area		

4. When a recording file appears, press the delete key to delete the current recording file